


MagicEzy Hairline Fix

Detailed Application Instructions

NOTES: Do not use below 10°C / 50°F. Not suitable for areas permanently submerged in water.

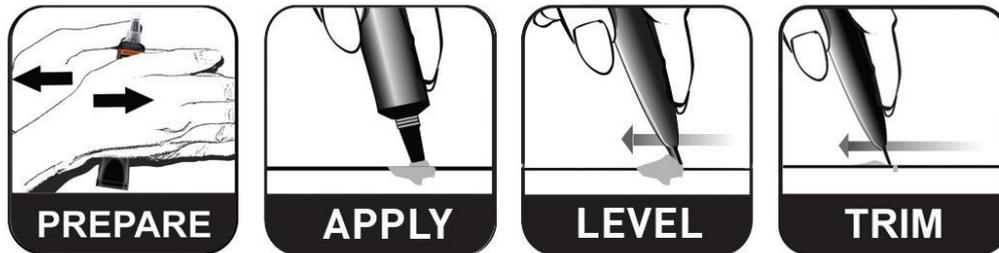

Prepare

1. Grab a needle and lightly scrape any dirt, grime and wax out of the crack.
2. Flush out the crack with a cup of soapy water, then rinse it with clean water.
3. Shake the tube vigorously for 2 minutes to mix and thin the ingredients.

Apply

4. Apply only one drop to the crack. Don't go squeezing the whole tube in there to fill it up.
5. Have a tissue ready in your spare hand.
6. It is important that the surface being repaired isn't too warm, otherwise the product dries too fast. If it feels warm to touch, lay a damp cloth over it for a few minutes to cool. If possible, shade the area from sun while doing the repair.

Level

7. Quickly turn tube up the opposite way to use the level scraper on the end of tube.
8. Rapidly wipe the Hairline Fix into the crack. This helps to thin the product even more.

Trim

9. As soon as it feels tacky, immediately wipe the Level with a tissue, then scrape away any surplus MagicEzy. Repeat this until it's clean and smooth.
10. Now all you have to do is wait 2 hours before applying another coat if needed and depending on the depth of the crack, you may need up to four coats.
11. IMPORTANT – If the temperature is expected to drop below 20°C / 70°F within 24 hours, blow dry the repair with a warm hairdryer for about 2 minutes after each coat.

CURE TIME: At 70°F / 20° C (In cooler conditions, allow more time): Re-coat after 2 hours. Avoid any contact for 48 hours after application. Avoid getting wet for 14 days (If necessary, cover area with a temporary shield. Eg. plastic bag, sealed with electrical tape). MagicEzy will continue to strengthen and harden over the next 2 to 4 weeks.

Demonstration videos available at: www.magiczy.com/videos